





## ZEBEX Z-6182 soros beállítás


Enter/Exit Programming Mode

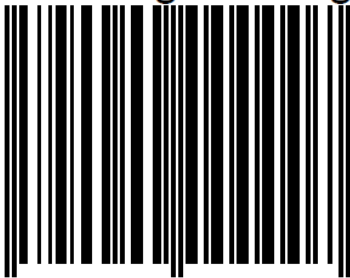

Reset (Return to factory default)

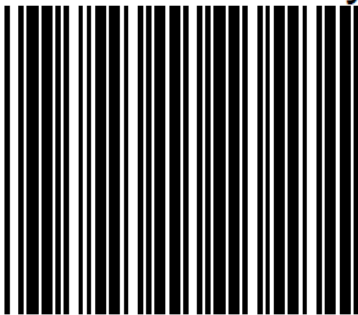

Return to RS-232 Default

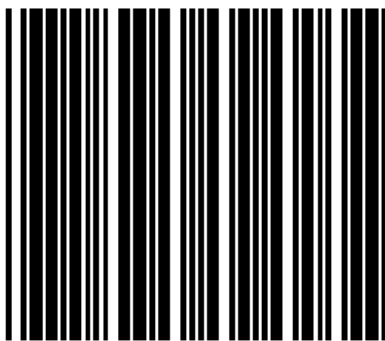

Enter/Exit Programming Mode

